

# CZE R03 FM Radio Receiver UserManual




Mode INO .: CZE R03

FMUSER NTERNATIONAL GROUP NC. WWW FMUSER NET



Dear users, thanks for choosing CZERF products. To use all features of this product better, please read this manual carefully before using the product, included product features with operating instruction and use precautions.

# CZE R 03 D agram

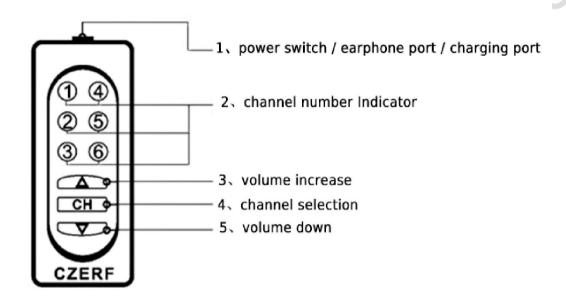

# Basic Usage

### 1. Tum on/Tum offReceiver

Headphone plugged in, receiver automatically open; headphone unplugged, receiver automatically turns off.

# 2. Charging

- 1)One end of charging cable 3.5mm connector into headphone connector, and the other end connect to power adapter's USB port, then receiver's 6 channel number flashing blue light, normal charging; stop flashing, indicating full.
- 2)When it is at low battery, the selected channel number indicator flashing to a lert low battery, charge it in time.



#### 3. Select the receive channel

In to tall 6 receive channels, 'CH" button to switch channels, channel number indicator flashing, means channelse lected.

## 4. Volume Adjustment

## 5. Frequency Setting

- 1) Press CH button, se lect the setting channel
- 2) Long press CH button, corresponding channel lightwill enters bw flashing state after 5 seconds, indicated entering frequency search mode, waiting for search.
- 3) Press up key \_\_\_\_, channelen tering quick flash state, frequency search starts, then frequency into incremental search, if a channel searched, corresponding channel lightwillen ters low flash state, press CH button to save frequency and exit search mode. If not save this frequency, press up or down key to continue the search.
- 4) Press down key , channel light entering quick flash state, frequency search starts, then frequency will be decremented search, if a channel searched, corresponding channel light will enters bw flash state, press CH key to save frequency and exit search mode. If not save this frequency, press up or down key to continue the search.

# 6. Restore Factory Defaults

Firstly press down key , then plug in headphone, wait for 3 seconds, release the button, unplug the headphone, then re-insert the headphone, frequency back to the factory defaults.

# 7. PowerSaving Mode

- 1) Stop pressing button after 5 seconds, entering power saving mode, then the corresponding channel light off.
- 2) Press any key, the corresponding channel indicator lights up again, receiver exit power saving mode.



#### Attention:

1. The channel number indicator is not a button, please do not press by hand directly!

2W hen stop using this machine, please unplug the headphone.

#### TechnicalParameter of Receiver

1. Frequency range: 76.0-108.0MHz

2. Sensitivity: 12uV

3. Headphone Output Impedance: 32 Ohm

4. Stereo Separation: 35db

5. Battery Capacity/Endurance: 150mA/H,7 hours Endurance.

## Package List

- 1. CZE R 03 Receiver \*1
- 2. Dedicated Charging Cable \* 1
- 3. UserManual\*1

# Safety Tips

- 1. To reduce risk of fire ore lectric shock may occur without rendering the device to the rain, moisture or liquid dripping, must not put objects filled with liquid on the device.
- 2. Do not open the case by yourself to prevent in termal short guide to fire!

  Main tenance work required by qualified staff.
  - 30nce abnormal charging adapter, disconnect it immediately, then unplug the socket.
- 3. Accessories not replaceable, if damaged or needs to be replaced, please contact the professionals.

#### P recautions

- 1. Do not use headphone when driving or cycling, the headphone will reduce the surrounding sound, easily lead to accident.
- 2. Avoid probinged listening to music, listen to expert suggestion, no more than one hour continuous listening, pay attention to rest.
  - 3. Do not put receiver in the place by the sun, to heat or hum id.



## ContactUs

Web:www.fnuser.net Mob:+86 18613072427

Phone:+86 020-87597795 EXT:804

Skype: rita.ca i87

Email: rita@ fnuser.net

Address Room 1502 Hu LanGe No 273 HuangPu RdW est,

TianHe Dis. GuangZhou China,510620